


## GB AWM 8022/2

- A. Temperature Selection Buttons  
 B. Programme Sequence Indicator  
 C. "Start/Pause" Button  
 D. "Door Open" Indication  
 E. "Spin Speed Reduction" Button

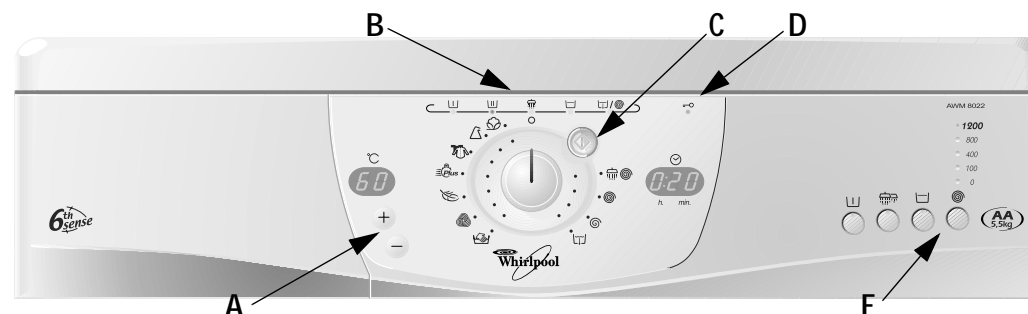

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

\* : optional / Yes : dosing required

- For improved garment care spin speed is restricted to 800 rpm in this programme.
- In this programme default spin speed can be increased till 400 rpm.

Programme	Care Labels	Type of wash/Notes	Max Load kg	Detergents and additives			Special options				Max Spin Speed rpm	Temperature °C
				Softener	Main Wash	Prewash	Prewash	Intensive Rinse	Rinse Hold	Spin Speed Reduction		
	Cotton	 Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	5.5	*	Yes	*	*	*	*	*	1200	20 to 95
	Synthetics	 Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	* <sup>1)</sup>	800 <sup>1)</sup>	20 to 60
	Daily	Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	*	Yes	—	—	*	*	*	1200	20 to 60
	Rapid Plus	 Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	*	Yes	—	—	*	*	*	1200	20 to 60
	Delicates	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	—	*	* <sup>1)</sup>	800 <sup>1)</sup>	20 to 40
	Wool	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	—	—	*	* <sup>1)</sup>	800 <sup>1)</sup>	20 to 40
	Handwash	Textiles made of silk, linen, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	1.0	*	Yes	—	—	—	*	* <sup>2)</sup>	400 <sup>2)</sup>	20 to 30
	Rinse + spin	— Same as the last rinse and the final spin in the "Coloured Cotton" programme.	5.5	*	—	—	—	*	*	*	1200	—
	Spin	— In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.	5.5	—	—	—	—	—	—	*	1200	—
	Gentle spin	— In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.5	—	—	—	—	—	—	* <sup>1)</sup>	800 <sup>1)</sup>	—
	Drain	— Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—	—	—

Whirlpool is a registered trademark of Whirlpool USA

5019 301 05377

## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	90	5.5	54**	1.90	2:00
Cotton	60	5.5	49	1.04	2:20
Cotton	40	5.0	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Daily	40	3.0	44	0.45	1:00
Rapid Plus	30	3.0	37	0.40	0:30
Delicates	40	1.5	60	0.60	0:45
Wool	30	1.0	60	0.30	0:40
Handwash	30	1.0	45	0.30	0:40

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\*To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the **programme selector knob** to the desired programme.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the pilot lamp of the **"Start/Pause"** button is flashing.
3. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.  
The recommended temperature (see the indicator) can be altered by pressing "+" or "-" button.

## SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

### "Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

### "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme flow indication is on.

### Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.

- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button again when flashing.

### "Spin Speed Reduction" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The pilot lamp of the **"Start/Pause"** button lights up.

The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding lamp goes out.

## DOOR LOCK

The door can be opened when the "Door Open" indication is on.

## PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.
1. Turn the programme selector to the "0" position.
  2. Turn the water supply tap off.
  3. Open the door and unload the machine.
  4. Close the tap and leave the door ajar to allow the drum to dry out.

## CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL A PROGRAMME BEFORE THE END

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Set the programme selector to "Drain". The spin indicators show "0" and the remaining time shows "0:02".
3. Press the **"Start/Pause"** button to start the drain programme.